


# Adjusting the creative Grand Hoop

When you use your creative Grand Hoop for the very first time, we recommend that you calibrate the hoop to your embroidery unit to achieve the best results when embroidering.

*Note: If you purchased your creative 2144/2140 prior to August, 2004 you may need to take your machine to your dealer for a mechanical adjustment to the embroidery unit for optimal results.*


Tip: We recommend that you repeat this procedure regularly, especially when using different types of fabric thicknesses. If you receive an error message indicating your embroidery is outside of the embroidery field, we recommend resizing your embroidery to a maximum of 230x215.


Attach the A-side of the creative Grand Hoop to the embroidery unit.

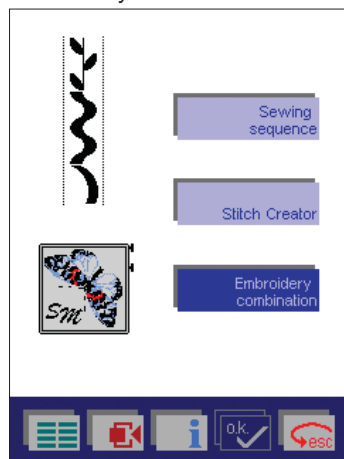


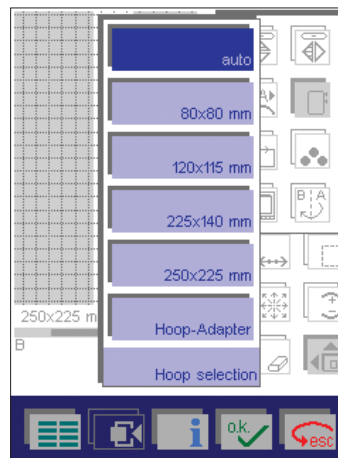
Touch Embroidery combination.



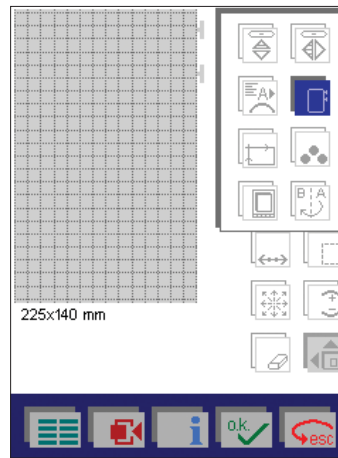

Touch more options icon .




Touch hoop selection icon .




Touch  to do a hoop detection. Touch .

Touch context menu .

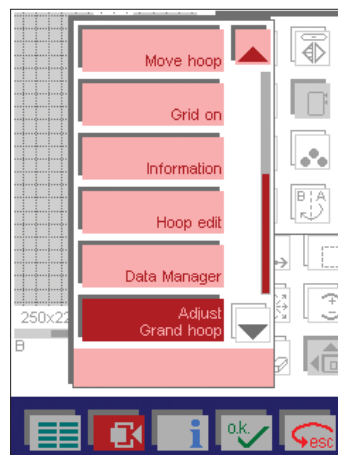


Touch Adjust Grand Hoop icon .

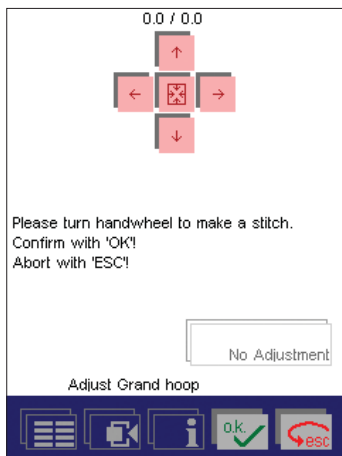


Take a stitch and leave the thread in the fabric or mark the needle point with a marking pen.

Confirm with

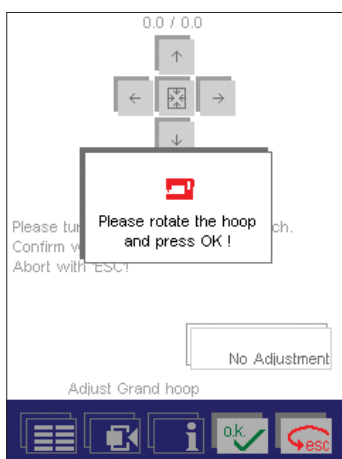

A message prompting you to rotate the hoop appears on the screen. Rotate the hoop and touch .

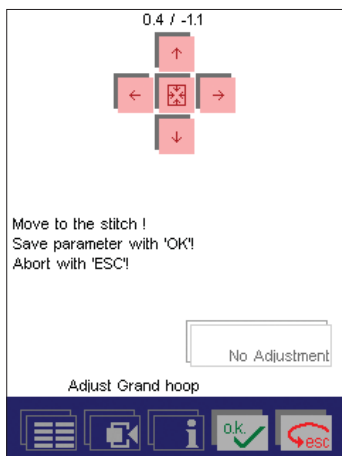


Use the arrows to move to the exact same position as the stitch you made. Test by turning the hand wheel and bringing the needle down.

Save the parameters by touching .

To exit the Context menu touch .

## Temporary removal of the adjustment


Depending on the fabric type and how it is put in the hoop, some large designs might not fit in the hoop area. To be able to embroider these big designs, you might have to remove the adjustment of the Grand Hoop.

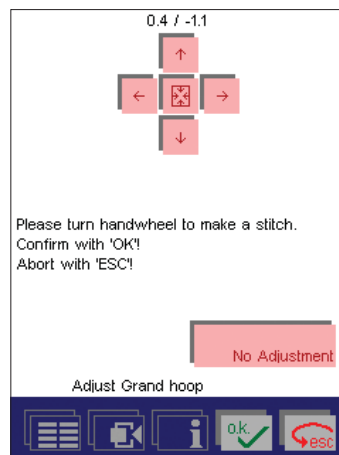

Touch the icon for the Context menu and then the Adjust Grand Hoop icon . Touch the icon and then . The adjustment is now temporarily removed.

Note: To get your adjustment back, leave the embroidery mode or turn off the machine.

## Damaged files

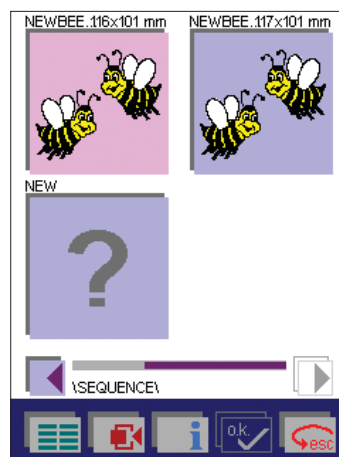

If a question mark appears on the design icon, it means that some old files might be damaged. You can always, without any risk of damaging the machine, try to open the file and save it again. If you succeed, the question mark will disappear. If not, the file has crashed and can not be used.