

Maintenance



Cleaning the machine

To keep your sewing machine operating well, clean it often. No lubrication (oiling) is needed.

Wipe the exterior surface of your machine with a soft cloth to remove any dust or lint built up.

Note: Use of cleaners or solvents on the machine can cause damage to the plexifront. Clean only with a soft dry cloth.


Wipe the PFAFF® HD screen with a clean, soft and damp cloth.

Cleaning the bobbin area



Note: Lower the feed dogs by pressing presser foot up and extra lift. Turn off the machine.

Remove the presser foot and slide off the bobbin cover. Place the screwdriver under the needle plate as shown on the picture and gently turn the screwdriver to pop off the needle plate. Clean the feed dogs with the brush found with the accessories.

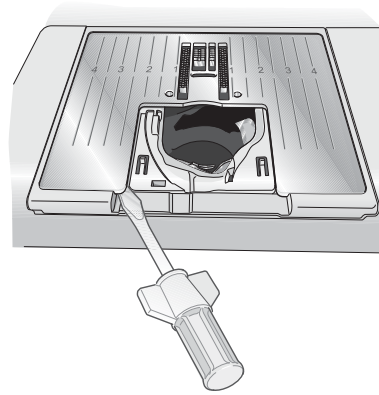

Cleaning under the bobbin area

Clean the area under the bobbin case after sewing several projects or any time you notice an accumulation of lint in the bobbin case area.


Remove the bobbin case holder (A) covering the front part of the bobbin case by lifting it up. Remove the bobbin case (B) by lifting it up. Clean with the brush.



Note: Use caution when cleaning around the thread snips knife.


Put the bobbin case and the bobbin case holder back in place.

Note: Do not blow air into the bobbin case area. The dust and lint will be blown into your machine.

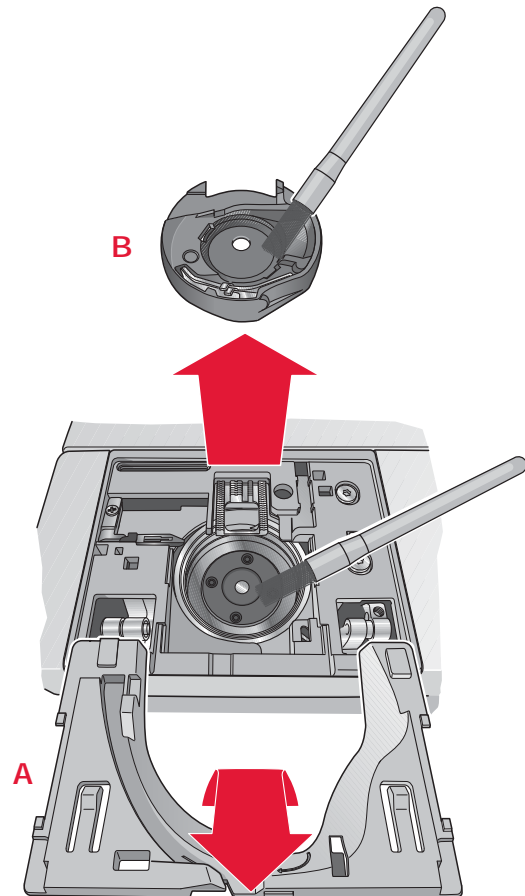

Replacing the needle plate

With feed dogs lowered, place the needle plate with the knob fitting into the notch at the back (C). Press the needle plate down until it clicks into place. Slide on bobbin cover.

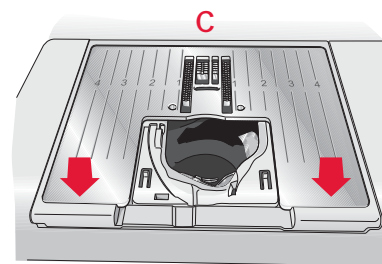

Troubleshooting

In this troubleshooting guide you will find solutions to the problems you may have with your machine. For further information please contact your local authorized PFAFF® dealer who will be happy to help you.

Problem/cause	Remedy
General problems	
Bobbin alarm does not work?	Clean lint from bobbin area and use only the original PFAFF® bobbins approved for this model.
Thread snips does not cut the thread?	Remove needle plate and clean lint from bobbin area. Enable automatic thread snips in the Settings menu.
Fabric does not move?	Make sure that machine is not set in free-motion mode in the Settings menu.
Wrong stitch, irregular or narrow stitch?	Deactivate twin needle or stitch width safety in the Settings menu.
The needle breaks?	Insert needle correctly as described in chapter 2.
The machine will not sew?	Check that all plugs are securely plugged into the machine and into the wall socket. Push bobbin winder lever to sewing position.
The PFAFF® HD screen is turned off?	Touch the screen to activate. Turn off screen saver in the Settings menu.
Icons on the screen are not activated when touched?	Calibrate the screen. Calibrate is found in the Settings menu.
The sewing and embroidery machine screen and/or function buttons do not respond to touch?	The sockets and function buttons on the machine can be sensitive to static electricity. If the screen does not respond to touch, turn the machine OFF and then ON again. If the problem persists, contact your authorized PFAFF® dealer.
The machine skips stitches	
Did you insert the needle properly?	Insert needle correctly as described in chapter 2.
Did you insert a wrong needle?	Use needle system 130/705 H.
Is the needle bent or blunt?	Insert a new needle.
Did you thread the machine properly?	Check how the machine is threaded.
Is the correct presser foot used?	Attach correct presser foot.
Is the needle too small for the thread?	Change the needle.
Needle thread breaks	
Did you insert the needle properly?	Insert needle correctly as described in chapter 2.
Did you insert a wrong needle?	Use needle system 130/705 H.
Is the needle bent or blunt?	Insert a new needle.
Did you thread the machine properly?	Check how the machine is threaded.
Is the needle too small for the thread?	Change the needle to the proper size for the thread.
Are you using poor thread with slubs or thread which has become dry?	Change to a new higher quality thread purchased from an authorized PFAFF® dealer.
Is a correct spool cap used?	Attach a spool cap of the right size for the actual thread spool.

Is the best spool pin position used?	Try a different spool pin position (vertical or horizontal).
Is the needle plate hole damaged?	Change the needle plate.

Bobbin thread breaks

Did you insert the bobbin properly?	Check the bobbin thread.
Is the needle plate hole damaged?	Change the needle plate.
Is the bobbin area full of lint?	Clean lint from bobbin area and use only the original PFAFF® bobbins approved for this model.
Is the bobbin wound correctly?	Wind a new bobbin.

The seam has uneven stitches

Is the thread tension correct?	Check needle thread tension and the threading.
Are you using too thick or slubbed thread?	Change the thread.
Is the bobbin thread evenly wound?	Check bobbin winding.
Is a correct needle used?	Insert a proper needle correctly as described in chapter 2.

The machine does not feed or feeds irregularly

Did you thread the machine properly?	Check how the machine is threaded.
Has sewing lint collected between the feed dogs?	Remove the needle plate and clean the feed dogs with a brush.

The embroidery design is distorted

Is the fabric hooped properly?	The fabric must be tightly hooped.
Is the inner embroidery hoop completely inserted in the outer embroidery hoop?	Hoop the fabric in such a way that the inner hoop always exactly matches the outer hoop.

The embroidery design has puckered

Did you stabilize your fabric sufficiently?	Ensure you use the proper stabilizer for your technique or fabric type.
---	---

The machine will not embroider

Is the embroidery unit attached?	Make sure that the embroidery unit is properly attached into the socket.
Is the wrong hoop attached?	Slide on the correct hoop.

Have your sewing machine serviced regularly by your local authorized PFAFF® dealer!

If you have followed this troubleshooting information and still have problems, take your sewing machine to your dealer. If there is a specific problem, it is a great help to test sew with your thread on a scrap of your sewing fabric and bring it to your dealer. A sewing sample will often give much better information than words.

Non-original parts and accessories

The warranty does not cover any defect or damage caused by use of non-original accessories or parts.

Index

4D™ Embroidery Software	2:13
4D™ Organizer.....	2:13
4D™ QuickFont.....	2:13

A

Accessories	1:10
Accessory tray	1:9
Accessory tray, embroidery unit.....	1:9, 7:2
Action indicator.....	2:15
Adjust Custom LED lights.....	3:12
Alert light	3:12
Alphabets	1:20
Attach the Sensormatic buttonhole foot	4:12
Audio repeat	3:11
Automatic stitch building.....	8:10
AutoSave current state	3:8
Auxiliary spool pin	2:4
Available memory.....	10:3

B

Background color	8:8
Background fabric.....	9:4
Balance.....	4:8
Basting	9:3
Blindhem stitch.....	4:15
Elastic blindhem stitch.....	4:16
Bobbin, insert.....	2:8
Bobbin position.....	9:5
Bobbin winding.....	2:7–2:8
Winding from horizontal position.....	2:7
Winding through the needle.....	2:7
Winding while embroidering or sewing.....	2:8
Browse Files & Folders.....	10:3
Button, sew on.....	4:14
Multi-purpose tool	4:14
Buttonholes	4:12–4:14
Buttonhole with gimp thread	4:14
Manual buttonhole.....	4:13
Repeat a manual buttonhole.....	4:13
Sensormatic buttonhole.....	4:13
Buttonhole slit length	4:10
Buttons and icons.....	2:15–2:16
Action indicator	2:15
Cut	2:15
Immediate tie-off.....	2:15
Needle up/down.....	2:16
Presser foot down and pivot.....	2:15
Presser foot up and extra lift.....	2:15
Reverse button	2:15
Reverse indicator	2:15
Start/stop.....	2:15
Stitch restart.....	2:16
Button stitch repetition.....	4:11

C

Calibrate	3:12
CD-drive.....	10:4
Center position	9:5
Change font.....	8:19
Change thread color	8:9
Changing the needle.....	2:11
Changing the presser foot.....	2:11
Cleaning.....	11:2
Color block sort	9:3
Color list	9:3
Color merge	9:4
Common icons.....	3:3
Long-touch	3:3
OK and cancel.....	3:3
Scroll bar	3:3
Touch functions	3:3
Computer	2:12, 10:4
Computer connection.....	2:12, 2:13, 2:14
Computer Software, 4D™	2:13
Connect the embroidery unit	7:3
Connect the foot control.....	2:2
Connect to power supply.....	2:2
Control point.....	8:10
Cover.....	2:2
Hard cover.....	2:2
Soft carrying bag.....	7:3
Create a sequence.....	5:3
Current position	9:5
Current state	
AutoSave current state	3:8
Restore current state	8:8
Save current state	9:4
Current stitch.....	9:3
Custom LED lights.....	2:3
Cut jump stitches.....	3:9
Cut position.....	9:5

D

Decorative stitches	1:16
Definition of a control point	8:10
Definition of a stitch point	6:3
Defragment machine memory	3:9, 10:8
Design.....	8:4
Delete.....	8:5
Duplicate.....	8:5
Group	8:5
Mirroring	8:5
Move design into hoop.....	8:5
Directional stitches.....	5:5
Disengage IDT	2:9
Duplicate	5:3, 6:3, 8:5

E

Electronic knee-lift	2:9
Embroidery mode - edit	8:1–8:20
Overview	8:2
Touch function - move.....	8:6
Touch function - pan.....	8:6
Touch function - rotate	8:6
Touch function - scale.....	8:6
Embroidery mode - stitch-out.....	9:1–9:10
Color list.....	9:3
Overview	9:2
Embroidery Software, 4D™	2:13
Embroidery stitch editor	8:14–8:16
Embroidery text editor	8:18–8:19
Change font	8:19
Load a font from another location	8:19
Load text to embroidery edit	8:19
Embroidery text spacing.....	8:19
Embroidery time	9:3
Embroidery unit	7:2
Connect	7:3
Level adjusting feet	7:3
Overview	7:2
Remove	7:3
Embroidery unit accessory tray	1:9, 7:2
Embroidery unit overview	1:10
Engage IDT.....	2:9
External Device.....	10:4

F

Feed dogs, lower	2:11
Files & Folders	10:1–10:8
Browse.....	10:3
External Device	10:4
Folder structure	10:5
Open a file or folder	10:5
Overview	10:2
Personal designs	10:4
Personal files	10:3
Personal fonts.....	10:3
Foot control	2:2
Four direction sewing.....	4:17
Free-motion.....	3:10
Sensormatic free-motion.....	3:10
Spring foot free-motion	3:10
Free arm.....	2:3
Full screen	9:4

G

Getting started embroidering.....	7:5–7:6
Go to stitch	9:3
Grid	8:8
Group.....	8:5

H

Handlook quilting.....	4:15
Hard cover	2:2
Hardware drivers, install.....	2:13
Hoop, select.....	8:9
Hoop position	
Bobbin position.....	9:5
Center position.....	9:5
Current position	9:5
Cut position.....	9:5
Park position	8:8, 9:5
Hoops.....	1:10, 7:2
Hoop the fabric.....	7:4

I

IDT.....	2:9
Disengage	2:9
Engage.....	2:9
Immediate tie-off.....	2:15
Info menu	3:13
Category.....	3:13
Index.....	3:13
Notes	3:13
Personal info.....	3:13
Inserting the bobbin.....	2:8
Installing your software	2:13
Install hardware drivers.....	2:13

J

Jump stitches, cut	3:9
--------------------------	-----

K

Knee-lift	2:9
-----------------	-----

L

Language.....	3:12
Level adjusting feet.....	7:3
Light	2:3
Load a design.....	8:2
Load a font	8:3

Load a font from another location.....	8:19
Load a stitch.....	8:3
Load text to embroidery edit.....	8:19
Locking point.....	9:6
Lock screen.....	3:12
Lowering feed dogs.....	2:11
Lower the presser foot.....	4:3

M

Machine memory, defragment.....	3:9, 10:8
Machine overview.....	1:8
Accessory tray.....	1:9
Embroidery unit overview.....	1:10
Front side.....	1:8
Rear side.....	1:9
Top parts.....	1:9
Machine settings.....	3:8–3:10, 4:3
Automatic presser foot lift.....	3:9
Automatic thread snips.....	3:9
AutoSave current state.....	3:8
Owner's name.....	3:8
Presser foot height embroidery.....	3:10
Sensormatic free-motion.....	3:10
Spring foot free-motion.....	3:10
Stitch width safety.....	3:8
Timer.....	3:9
Twin needle.....	3:8
Manual buttonhole.....	4:13
Matching point.....	9:7
Mirroring.....	4:8, 5:3, 6:3, 8:5
Monochrome.....	9:4
Mouse.....	2:12, 3:13
Move.....	6:5, 8:6
Move design into hoop.....	8:5
Multi-purpose tool.....	2:11, 4:14
Multi-select.....	6:4, 8:4

N

Needle, changing.....	2:11
Needle plate.....	11:2
Remove.....	11:2
Replace.....	11:2
Needle position.....	4:9
Needles.....	2:10
Needle threader.....	2:5
Needle up/down.....	2:16

O

Orbiting.....	9:7
Organizer, 4D™.....	2:13

P

Pack away after sewing.....	2:2
Pan.....	6:5, 8:6, 9:4
Park position.....	8:8, 9:5
Patchwork program.....	4:7
PC (Personal Computer).....	2:12
Personal designs.....	10:4
Personal files.....	10:3
Personal fonts.....	10:3
Power supply.....	2:2
Precise positioning.....	9:6–9:8
Locking point.....	9:6
Matching point.....	9:7
Orbiting.....	9:7
Position hoop.....	9:6
Presser feet.....	1:11
Presser foot, change.....	2:11
Presser foot down and pivot.....	2:15, 4:3
Presser foot height embroidery.....	3:10
Presser foot up and extra lift.....	2:15, 4:3
Program a sequence.....	5:3

Q

QuickFont, 4D™.....	2:13
Quick color change.....	8:9
Quick help.....	3:13

R

Raise the presser foot.....	4:3
Register.....	2:14
Remove the embroidery unit.....	7:3
Repeat a manual buttonhole.....	4:13
Replacing the needle plate.....	11:2
Resize.....	8:16–8:17
Retain fill type.....	8:16
Restore current state.....	8:8
Reverse button.....	2:15
Reverse indicator.....	2:15
Rolled hem.....	4:16
Rotate.....	8:6

S

Safety instructions.....	2
Save current state.....	9:4
Save design.....	8:7

- Save options 5:4
 - Embroidery edit 8:7
 - Sequencing 5:4
 - Sewing mode 4:4
 - Stitch Creator 6:5
- Save personal default stitch 4:4
- Save to Personal files 4:5
- Save to Personal menu 4:4
- Scale 8:6
- Screen and light settings 3:12
 - Adjust Custom LED lights 3:12
 - Alert light 3:12
 - Calibrate 3:12
 - Language 3:12
 - Screen saver 3:12
- Select a stitch 4:3
- Select hoop 8:9
- Selection menu 3:4–3:5
 - Overview 3:4
 - Personal menu 3:4
 - Selecting a design 3:5
 - Selecting a font 3:5
 - Selecting a stitch 3:4
 - Stitch categories 3:4
 - Stitch subcategories 3:4
- Sensormatic buttonhole 4:13
- Sensormatic buttonhole foot 4:12
- Sensormatic free-motion 3:10
- Sequence commands 5:4
- Sequence start position 4:11, 5:5
- Sequencing 5:1–5:6
 - Create a sequence 5:3
 - Directional stitches 5:5
 - Overview 5:2
 - Preview 5:5
 - Save options 5:4
 - Sequence commands 5:4
 - Sequence start position 4:11, 5:5
- Settings menu 3:8–3:12
- Sewing hems in heavy fabric 4:15
- Sewing in zippers 4:16
- Sewing mode 4:2–4:18
 - Machine settings 4:3
 - Overview 4:2
 - Save options 4:4
- Sewing programs 4:6
 - Combining tapering and patchwork programs 4:7
 - Patchwork program 4:7
 - Single stitch program 4:7
 - Tapering program 4:6
- Sewing recommendations 4:3
- Sewing techniques 4:12
 - Blindhem stitch 4:15
 - Buttonholes 4:12
 - Candlewicking 1:19
 - Embroidery hoop stitches 1:20
 - Four direction sewing 1:20, 4:17
 - Handlook quilt stitches 1:20, 4:15
 - Pearl and edge stitches 1:19
 - Rolled hem 4:16
 - Sewing hems in heavy fabric 4:15
 - Sewing in zippers 4:16
 - Three-step zigzag stitch 4:12
- Sew on a button 4:14
 - Multi-purpose tool 4:14
- Shaping with Automatic stitch building ... 8:10–8:12
 - Attraction slider 8:11
 - Automatic stitch building 8:10
 - Control point 8:10
 - Duplicate/delete last object 8:11
 - Embroidery text spacing 8:19
 - Select control points 8:11
 - Select shape 8:10
 - Select spacing 8:11
- Single stitch program 4:7
- Slide on the hoop 7:4
- Soft carrying bag 7:3
- Software, 4D™ 2:13
 - Install 2:13
 - Launch 2:14
 - Organizer 2:13
 - QuickFont 2:13
- Sound settings 3:11
 - Audio repeat 3:11
 - User defined sound 3:11
 - Volume 3:11
- Speed control 4:6, 9:5
- Spool cap 2:4
- Spool pins 2:4
 - Auxiliary spool pin 2:4
 - Horizontal position 2:4
 - Vertical position 2:4
- Spring foot free-motion 3:10
- Start/stop 2:15
- Stitch Creator 6:1–6:6
 - Multi-select 6:4
 - Overview 6:2
 - Save options 6:5
 - Stitch point 6:3
 - Touch function - move 6:5
 - Touch functions - pan 6:5
- Stitch density 4:10
- Stitch length 4:9
- Stitch overview 1:12–1:20
 - Alphabets 1:20
 - Decorative stitches 1:16
 - Utility stitches 1:12

Stitch point	6:3
Stitch positioning	4:9, 5:3
Stitch restart	2:16
Stitch settings.....	4:9–4:11
Stitch width.....	4:9
Stitch width safety.....	3:8
Stylus holder	2:3
Supported file formats.....	10:2

T

Tapering program	4:6
Task bar	3:2
Thread color edit	8:9
Quick color change.....	8:9
Thread cutter.....	2:3
Threading	2:5
Needle threader	2:5
Threading for twin needle.....	2:6
Threading the machine	2:5
Thread sensor	2:6
Thread snips.....	2:15
Thread tension.....	4:10, 9:3
Three-step zigzag stitch.....	4:12
Tie-off options.....	4:5
Sewing with tie-off options.....	4:5
Touch functions.....	6:4, 6:5, 8:6, 9:4
Move.....	6:5, 8:6
Pan	6:5, 8:6, 9:4
Rotate	8:6
Scale.....	8:6
Troubleshooting	11:3-11:4
Twin needle.....	2:6, 3:8
Select twin needle.....	3:8
Threading for twin needle.....	2:6

U

Unpacking.....	2:2
Update your machine	2:14
USB Embroidery stick	2:12, 10:4
USB ports.....	2:12
Connect to and Remove from.....	2:12
Utility stitches.....	1:12

V

Winding bobbin.....	2:7–2:8
Winding from horizontal position.....	2:7
Winding through the needle.....	2:7
Winding while embroidering or sewing.....	2:8

Z

Zippers, sewing	4:16
Zoom in and out.....	6:4, 8:3, 9:4
Zoom to all	4:8, 5:3
Zoom to hoop/zoom to all	8:3, 9:4

We reserve the right to change the machine equipment and the assortment of accessories without prior notice, or make modifications to the performance or design.

Such modifications, however, will always be to the benefit of the user and the product.

Intellectual Property

 
Patents protecting this product are listed on a label positioned underneath the Sewing Machine.

PFAFF, CREATIVE VISION, CV, IDT (image), 4D, etc are registered trademarks or trademarks of VSM Group AB.



Please note that on disposal, this product must be safely recycled in accordance with relevant National legislation relating to electrical/electronic products. If in doubt please contact your retailer for guidance.

4D™ Embroidery Machine Communication CD
(For personal computer. See page 2:13)





VSM Group AB • SE-561 84 Huskvarna, Sweden
www.pfaff.com

413 19 13-26A • English • InHouse • © 2008 VSM Group AB • All rights reserved • Printed in Sweden on environmentally-friendly paper