



**PFAFF**

# Chair Pad

ClassicStyle home<sup>1529/2029</sup>

**Size 5 x 40 x 40 cm (2 "x 15 ¾ x 15 ¾)**

## You need:

- Turquoise silk fabric 90 cm (36")
- Turquoise patterned fabric 50 cm ( 20")
- Lime green cotton fabric 20 cm (8")
- Matching sewing thread in lime green and turquoise.
- Vliseline 20 cm ( 8")
- Marking pen
- Invisible zipper 35 cm ( 3/8 yd.)
- Cotton filler cord 6mm ( ¼"), 4,5 m (5 yd.)
- Invisible zipper foot
- Welting foot
- Twin welting foot

*All the fabrics have the width 140 cm (55")*

# 1 Cutting

1.5 cm (5/8") seam allowance is included.

## Turquoise patterned fabric

1 piece – 43 x 43 cm (17" x 17")

2 pieces – 23 x 43 cm (9" x 17")

## Turquoise silk fabric

4 pieces – 5 x 85 cm (2 "x 33")

Bias strip, Welting foot.

1 piece – 9 x 80 cm (3.5" x 31 ½")

Bias strip, Twin welting.

## Lime green cotton fabric

4 pieces – 8 x 43 cm (3 1/8" x 17")


## Viseline

4 pieces - 8 x 43 cm (3 1/8" x 17")

# 2 Sewing

## Twin Welting Foot Sewing:


1. Attach the Twin welting foot on your Classic Style Home sewing machine. Thread your sewing machine with turquoise sewing thread on the top and bobbin.
2. Make bias strips long enough to cover the cords and wide enough to wrap around the two cords plus seam allowance. Piece strips where necessary.
3. Place the cords on the wrong sides of the bias strip – side by side - and wrap the fabric around the cords.

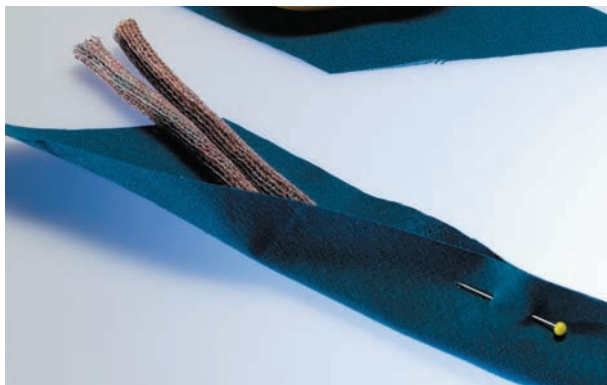

4. Place the fabric and cord under the twin welting foot with the right cord under the left groove of the foot, and the raw edges to the right.
5. Adjust to centre needle position – straight stitch and stitch length 3.
6. Keep the cords against the fold as you sew. The cords will be sandwiched between the fabric and the seam.



7. Trim the fabric close to the seam and press seam allowance to the left.
8. Wrap the excess fabric to the centre back of the cord.
9. Put the covered cord under the two grooves of the presser foot and sew down the centre. Cut the twin welting piece into 14 pieces measuring 8 cm (3 1/8").
10. See illustration on top of next page for placement of the twin welt pieces on two of the lime green fabric. Sew into place.
11. Sew the four lime green strips together, right sides facing, to create the sides of the chair cover.

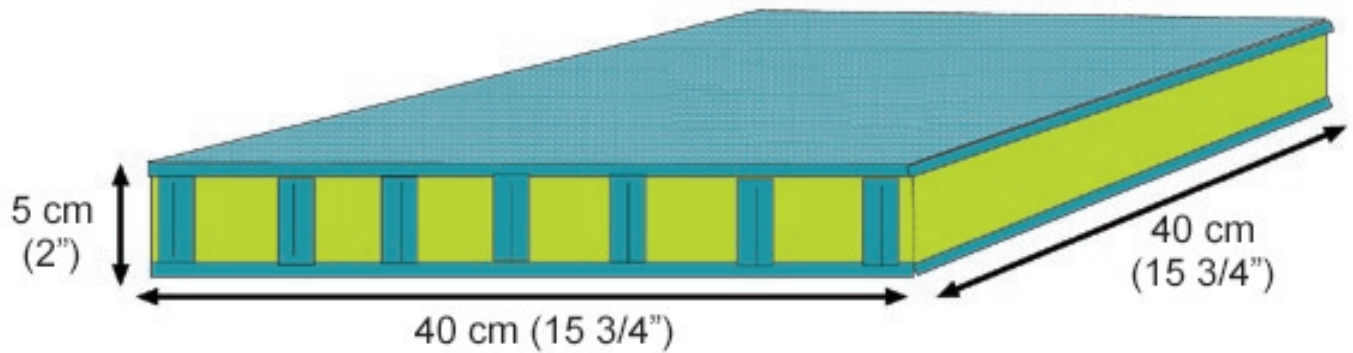

### Zipper Foot Sewing:

1. Attach the invisible zipper foot.
2. Use the marking pen to mark the length of the zipper on the 43 x 23 (17" x 9") turquoise fabrics, on the 43 cm (17") side. The zipper should be at least 2 cm to 3 cm ( $\frac{3}{4}$ " to  $1\frac{1}{4}$ ") longer than the opening.
3. Attach the Invisible Zipper Foot and select a straight stitch, middle needle position and set the stitch length to 2.5 mm.
4. Open the zipper and flatten the coil slightly with your thumb, so that the seam line between the tape and the coil becomes visible. Never iron the zipper.
5. Place the right half of the zipper onto the right side of the opening, with right sides of the zipper and fabric together. The coil should lie directly on the seam line, starting about 1.5 to 2 cm ( $\frac{5}{8}$ " to  $\frac{3}{4}$ ") below the upper edge of the fabric. Pin in place. Make sure that the bottom end of the zipper extends 2 cm to 3 cm ( $\frac{3}{4}$ " to  $1\frac{1}{4}$ ") beyond the bottom end of the opening.
6. Carefully press with your finger the teeth slightly to the right and lower the zipper foot, so that the coil lies in the groove to the right of the needle.
7. Sew the zipper in place and then the rest of the seam.

### Welting Foot Sewing:

1. Attach the welting foot. Thread your sewing machine with turquoise sewing thread on the top and bobbin.
2. Place the cord on the wrong side of the bias fabric strip and wrap it around the cord.
3. Place the fabric and cord under the presser foot with the right cord under the groove of the foot, and the raw edges to the right.
4. Select centre needle straight stitch and stitch length 3.
5. Stitch to cover the cording with the fabric.
6. Trim the seam allowance to 1.5 cm ( $\frac{5}{8}$ ")
7. Place the single welt cord between the turquoise top layer and the lime green side pieces right sides together. Sew the cord in place. Make some notch in the corners, sew it 90 degrees. Leave the zipper open slightly for turning. Repeat this for the bottom side.
8. Trim the seam allowance down to 1 cm ( $\frac{3}{8}$ ") and overcast. Turn right side out.
9. Place the foam rubber inside the chair pad and zip closed.

